


PLANEWAVE INSTRUMENTS

Adaptateurs visuels et de maintien de distance primaire/secondaire pour CDK12.5

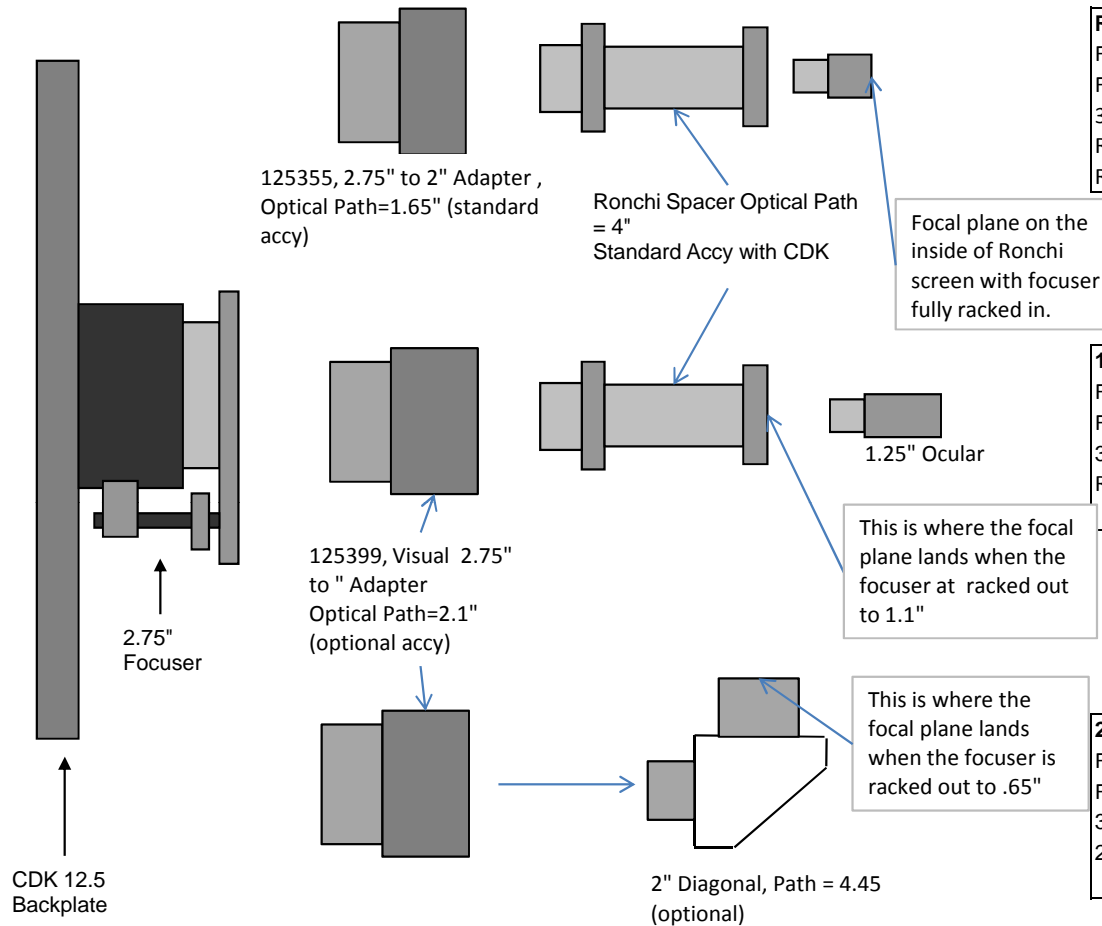

Primary to Secondary Spacing (all standard equipment)


Ronchi Ocular	10.45	remaining B
Focuser racked in	3.25	7.2
Focuser half racked	0	7.2
3.5 to 2 Adapter	1.65	5.55
Ronchi Spacer	4	1.55
Ronchi Ocular	1.545	0.005
	tol=+/-5mm	

1.25" Visual Use for collimating	10.45	remaining t
Focuser racked in	3.25	7.2
Focuser Position (0-1.3")	1.1	6.1
3.5 to 2 Visual Adapt - 125399	2.1	4
Ronchi Spacer - 200354	4	0

2" Ocular Visual Use	10.45	remaining t
Focuser racked in	3.25	7.2
Focuser Position (0-1.3")	0.65	6.55
3.5 to 2 Visual Adapt - 125399	2.1	4.45
2" Diagonal (optional)	4.45	0

PLANEWAVE INSTRUMENTS

Adaptateurs visuels et de maintien de distance primaire /secondaire pour CDK17 and CDK20

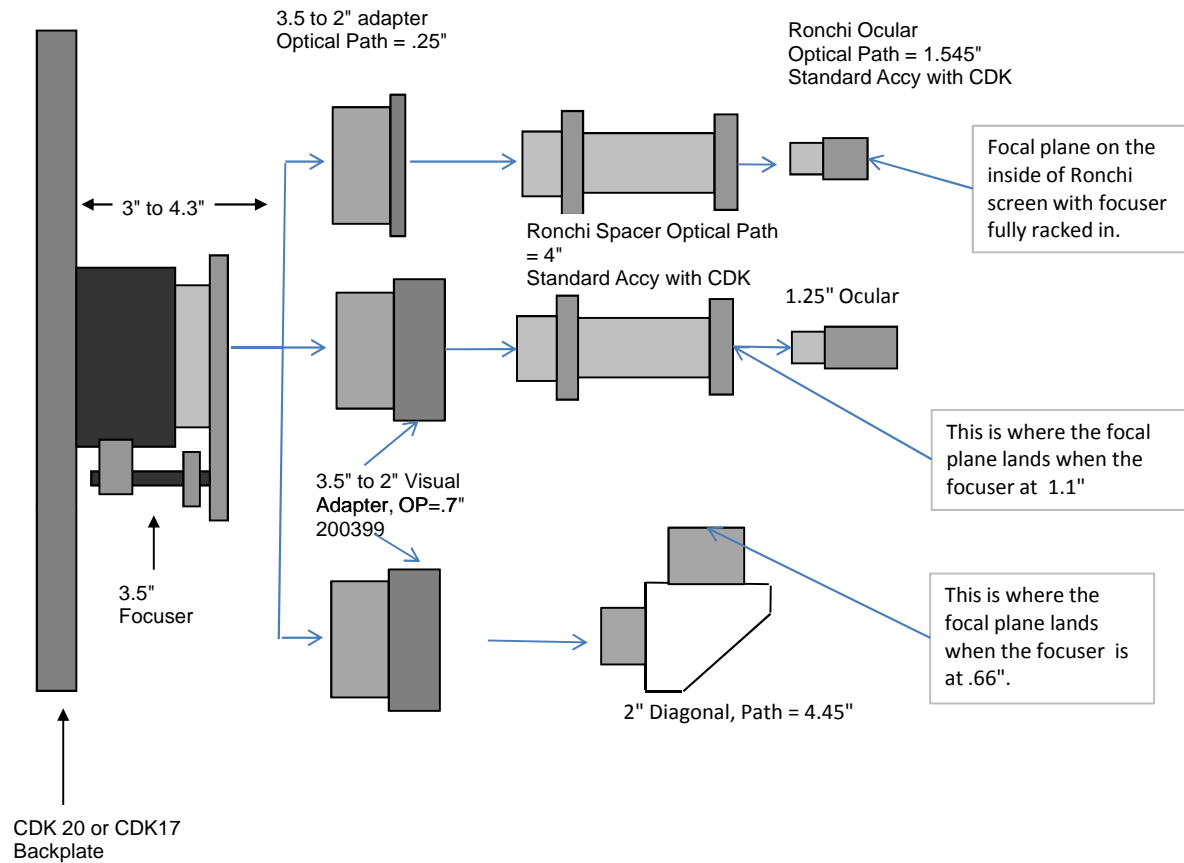

Primary to Secondary Spacing (all standard equipment)

Ronchi Ocular	8.81	remaining BF
Focuser racked in	3	5.81
Focuser half racked	0	5.81
3.5 to 2 Adapter	0.25	5.56
Ronchi Spacer	4	1.56
Ronchi Ocular	1.545	0.015
tolerance +/-5mm		

Visual Use with 1.25" Ocular (for collimation)

1.25" Ocular (not standard)	8.81	remaining BF
Focuser racked in	3	5.81
Focuser half racked	1.11	4.7
3.5 to 2 Visual Adapt - 200399	0.7	4
Ronchi Spacer	4	0
1.25" Ocular (not provided)	0	0.000

Visual Use with 2" Oculars

Visual 3.5" to 2"	8.81	remaining BF
Focuser racked in	3	5.81
Focuser Position (0-1.3")	0.66	5.15
3.5 to 2 Visual Adapt - 200399	0.7	4.45
2" Diagonal	4.45	0
2" Ocular (Not provided)	0	0